


ideal
WORK[®]

innovative surfaces

Installation

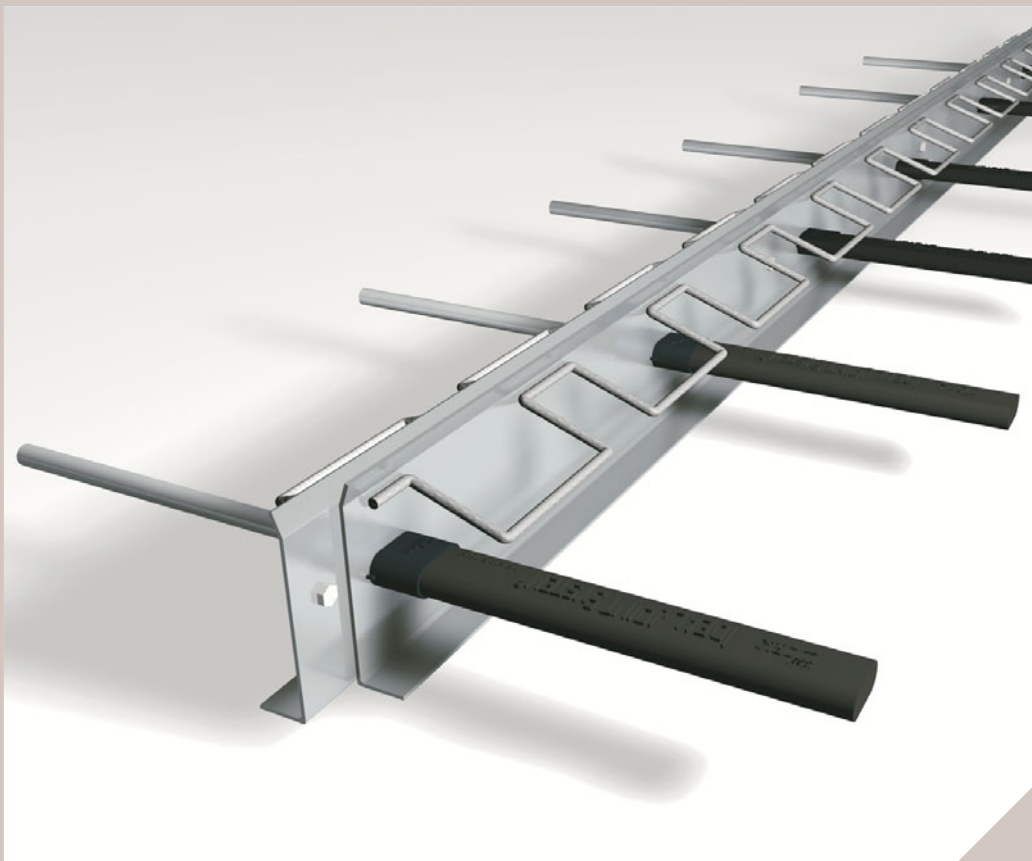

Ideal Joint Classic

Ideal WORK S.r.l. - Via Kennedy, 52 31030 Vallà di Riese Pio X (TV) Italia
Tel. (+39) 0423 4535 - Fax (+39) 0423 748429 - www.idealwork.it info@idealwork.it

01




Positioning on the joint line.

02



Installation with PVC screws.

03

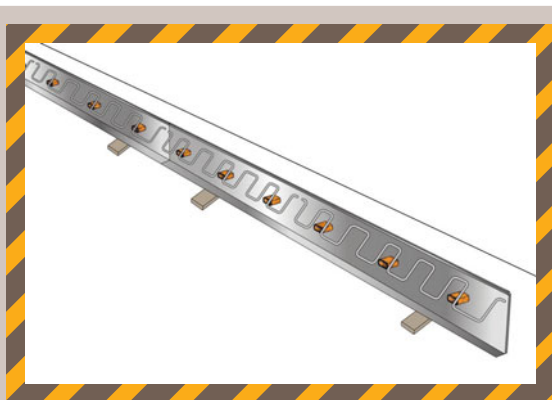

Alignment of Ideal Joint.

04



Set to level.

05



Joint material application and installation of the plastic sleeves.

06



Placing of the steel mesh and dowel bars.

07



Reinforce with formwork stakes or pins to restringht during concrete placement.



Do not stand on the dowel bars during the placement of the concrete.

08



Remove the PVC screws the next day to allow free movement of Ideal Joint.



Make sure all PVC screws are removed before the next placement of concrete.